




screen
excellence

TAM 2L
installer instructions

- Make sure there are two of you. One single person cannot handle the whole installation.
- Clear enough space, sufficiently larger that the external dimensions of the screen to allow moving around it.
- Open the crates and take all the components and sub-assemblies out, then remove the crates
- Check parts:

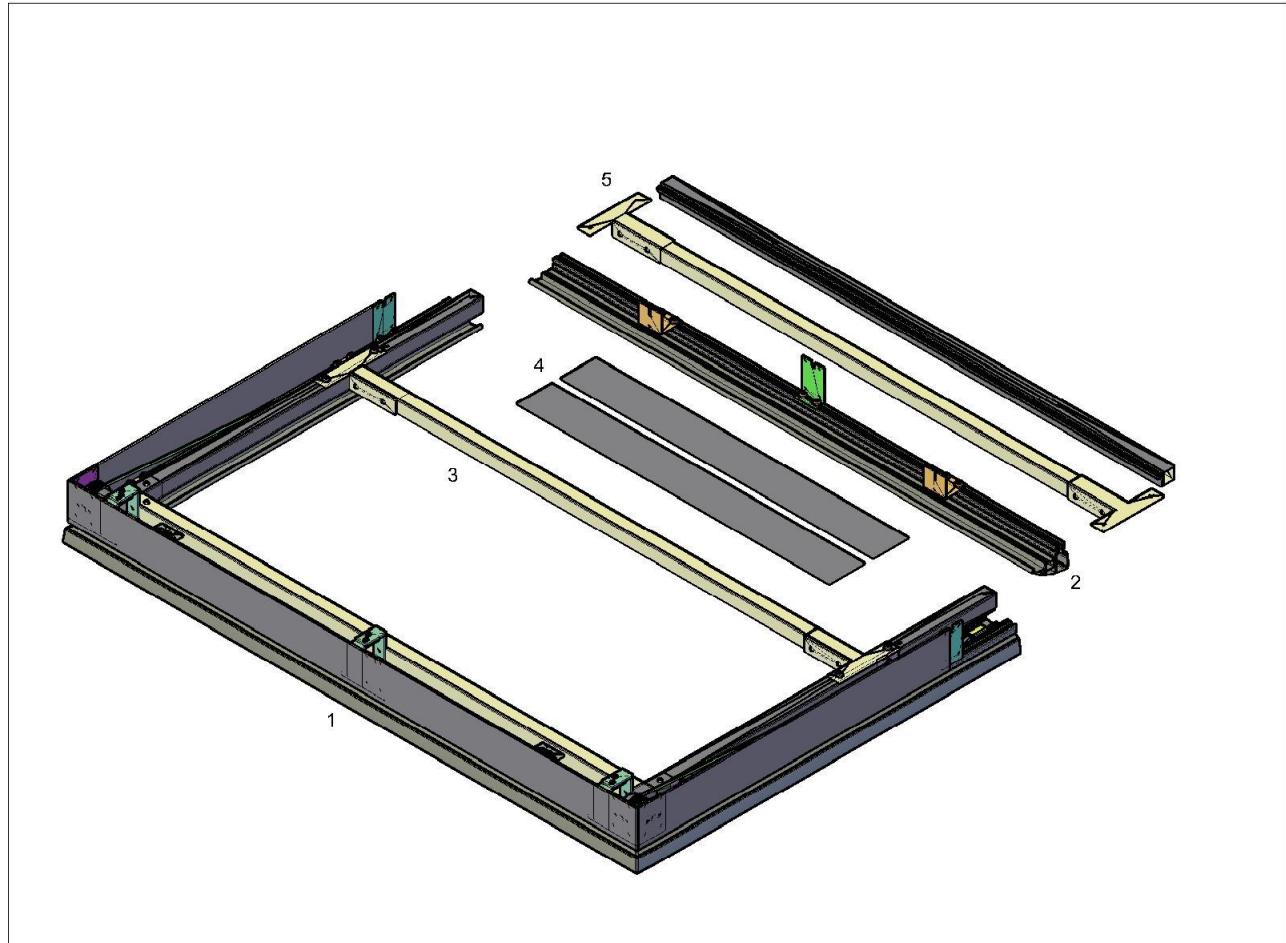


Each crate contains:

1. Mechanical section of screen main frame (left/right)
2. Middle section of screen main frame (top/bottom)
3. Preassembled section of sub frame (left/right)
4. 2 flanges – if they are required
5. Parts of subframe – middle part and stiffening.



Quantity of some parts can change. Also, you will find prolongators for main frame and sub frame, projection fabric, black backing, spatula, protective plastic sheet, gloves, screws, allen key, strips of velvet to finish sub frame edgings.

You will also need the following items: adhesive tape, tape measure, spirit level, screwdriver, sharp scissors.

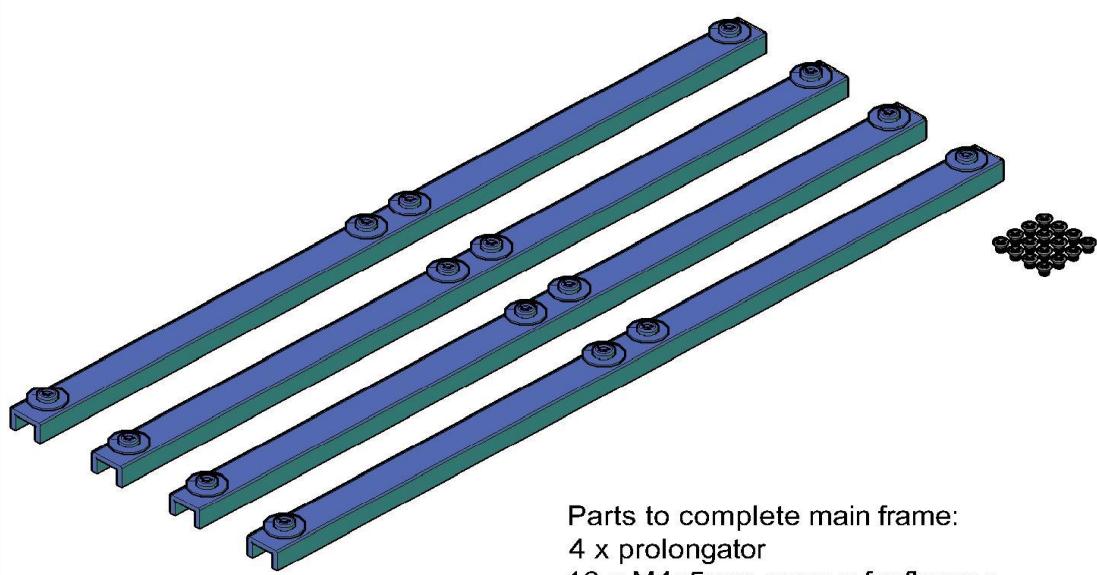

Parts to complete main frame:
4 x prolongator
16 x M4x5mm screws for flanges
1 x 4mm allen key
screwdriver


- Start by assembling the subframe (match colour tags). Be careful to check the square angles and put extra self-drilling screws if you notice that corners are not tight enough.
- Prolongators are fitted into frame channels (middle parts)
- Install stiffening bars – preassembled parts will help you to understand assembling process.

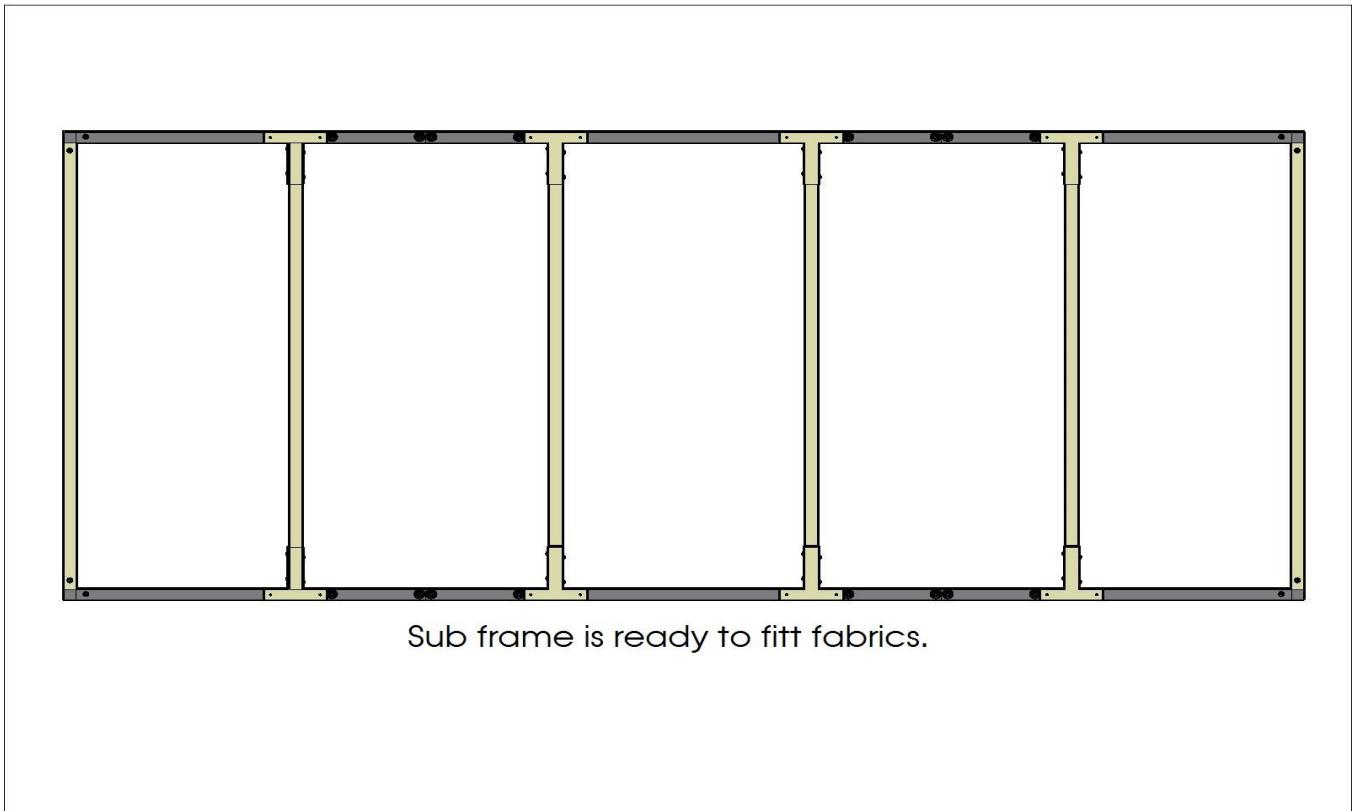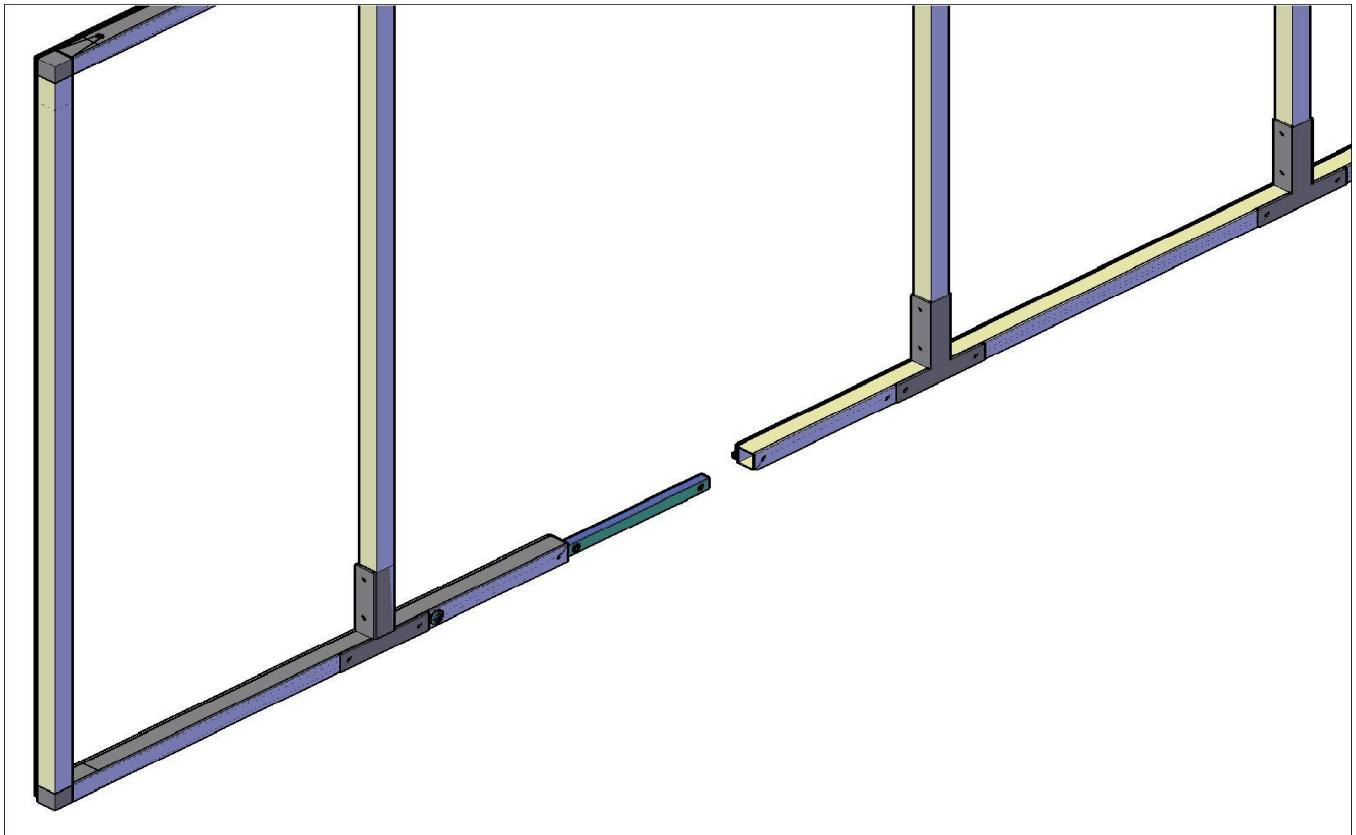

Sub frame is ready to fit fabrics.

➤ Install the black backing fabric.



Place the frame on the protective sheet; unfold the black backing fabric. Insert the fabric into the groove of the Gripfix profile with the provided spatula. Start by the middle of the four sides (the large sides first), and then progress towards the corners.

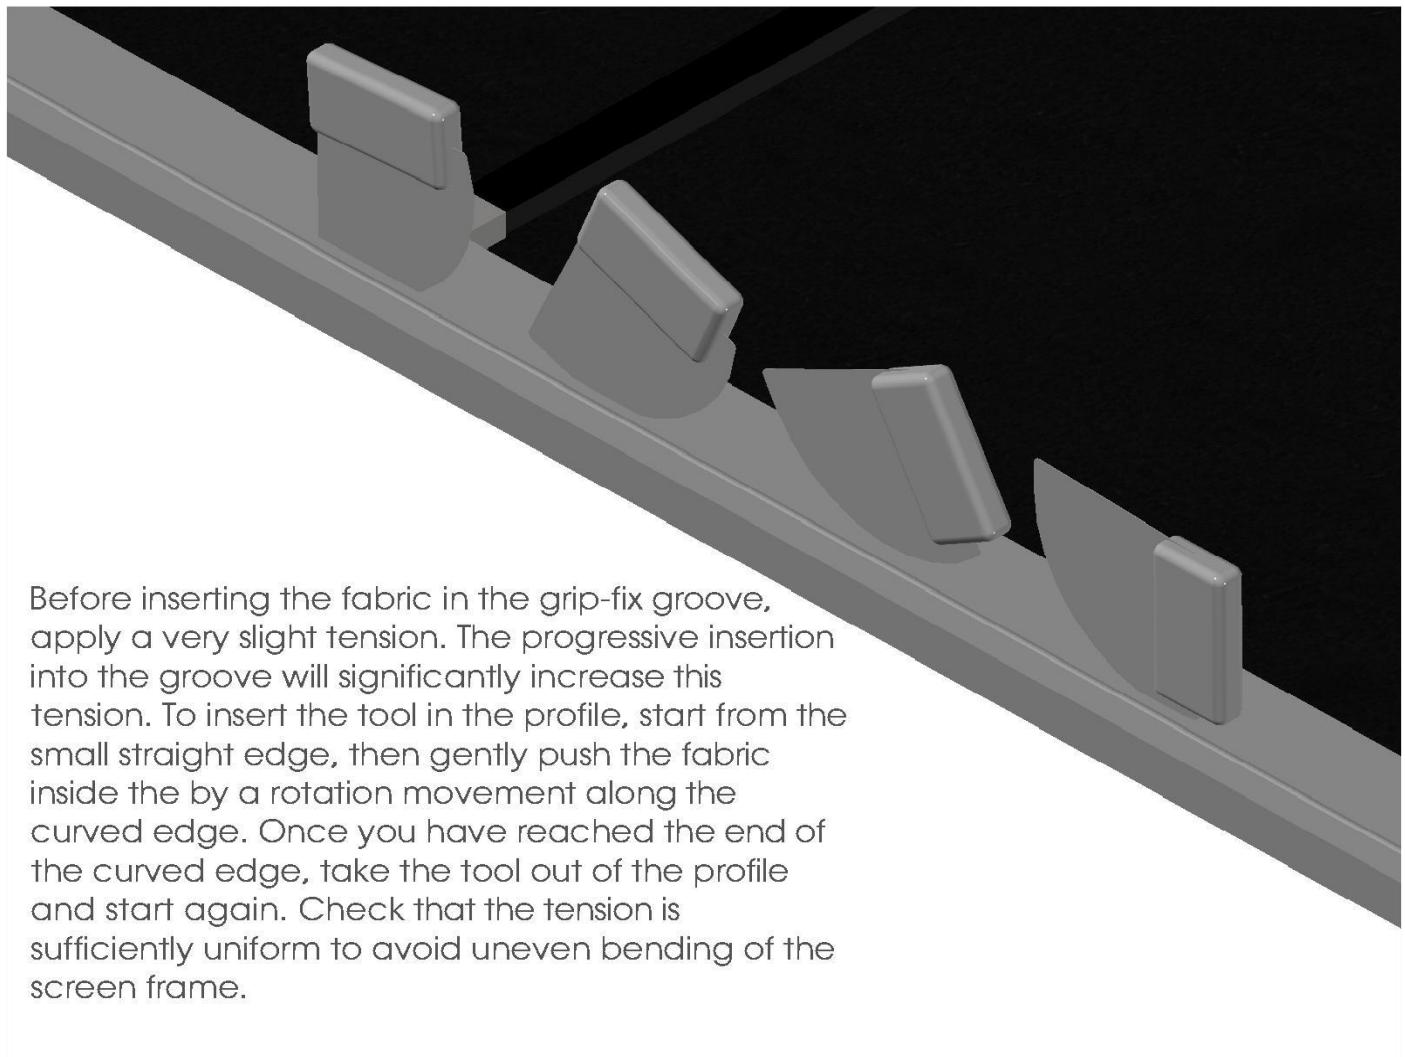



➤ Install the Enlightor fabric. Cut excess, leaving an edge margin of $1/2"$, fold fabric and using provided velvet finish sub frame edgings.



- Remove subframe from working area
- Start assembling main frame (match colour tags).

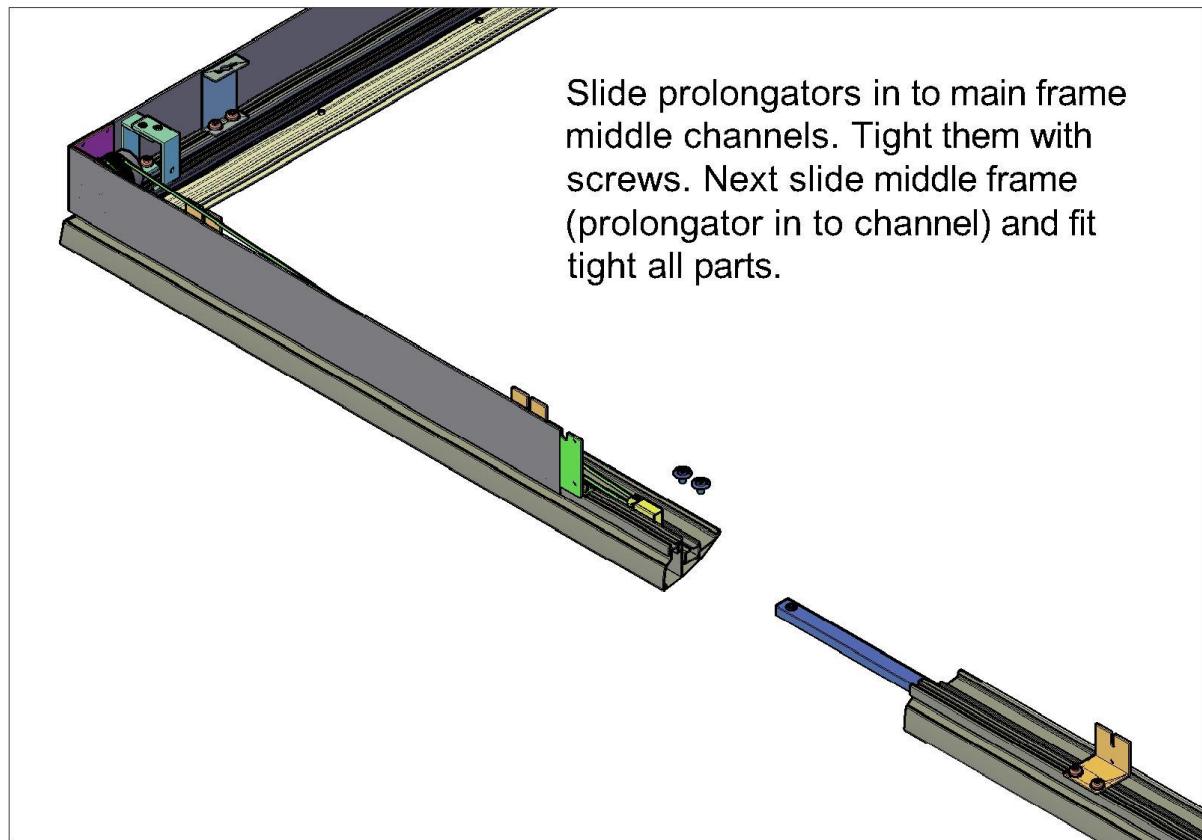
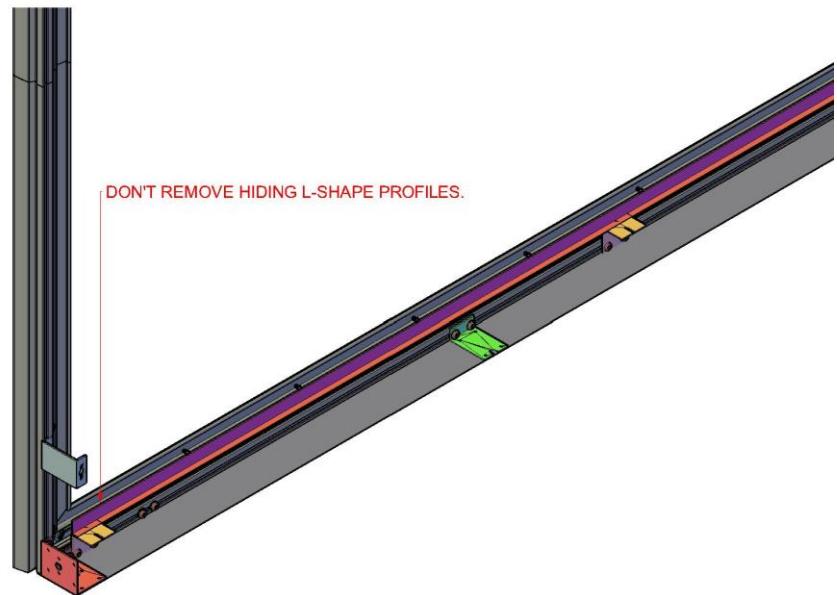




- Once the mainframe is assembled, lay it flat. Place sub frame on top of main frame. Screws which are fixed to sub frame should slide into groove in sub frame brackets.

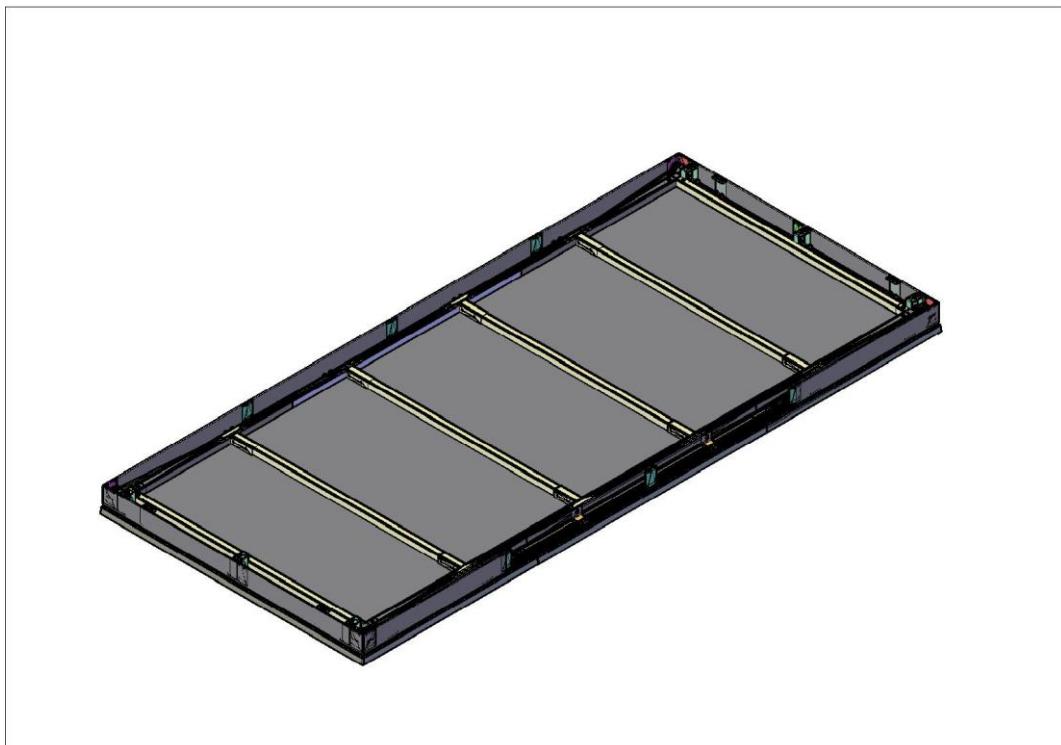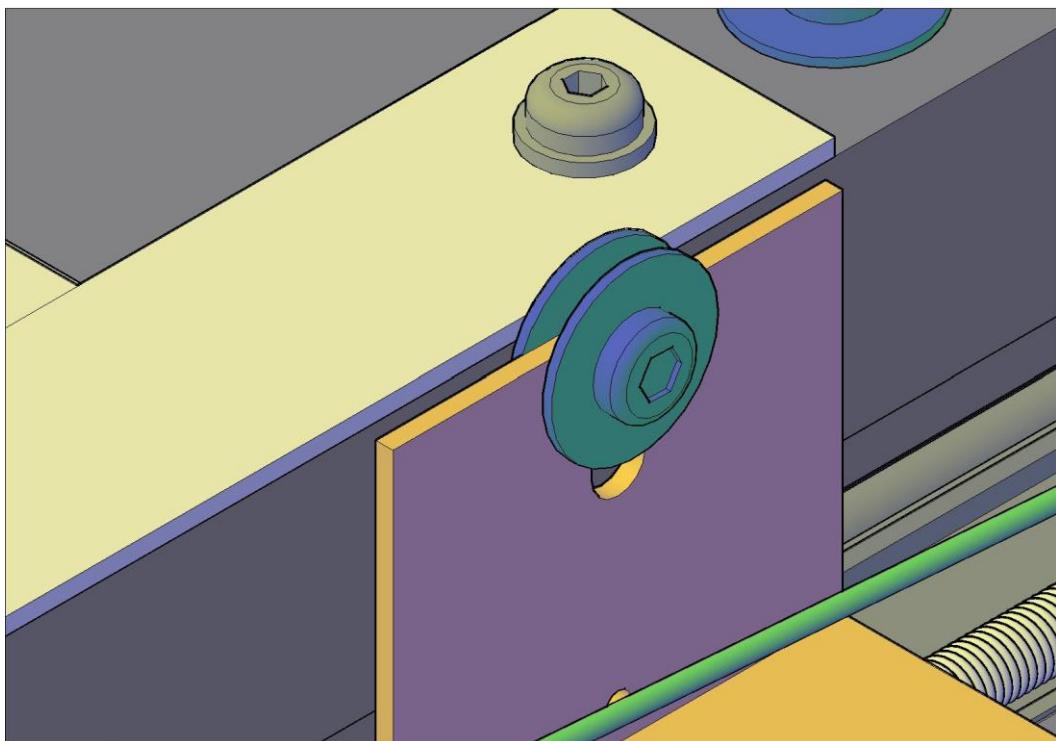

- Install remaining flanges (if required) on top and bottom of screen.

➤ Determine the position of the wall screws (size $\frac{1}{4}$ "). Refer to drawing. Install 6 wall screws at the correct distance, leaving the screw heads protruding by about $\frac{1}{2}$ ". Lift screen and hang on all 6 screws.

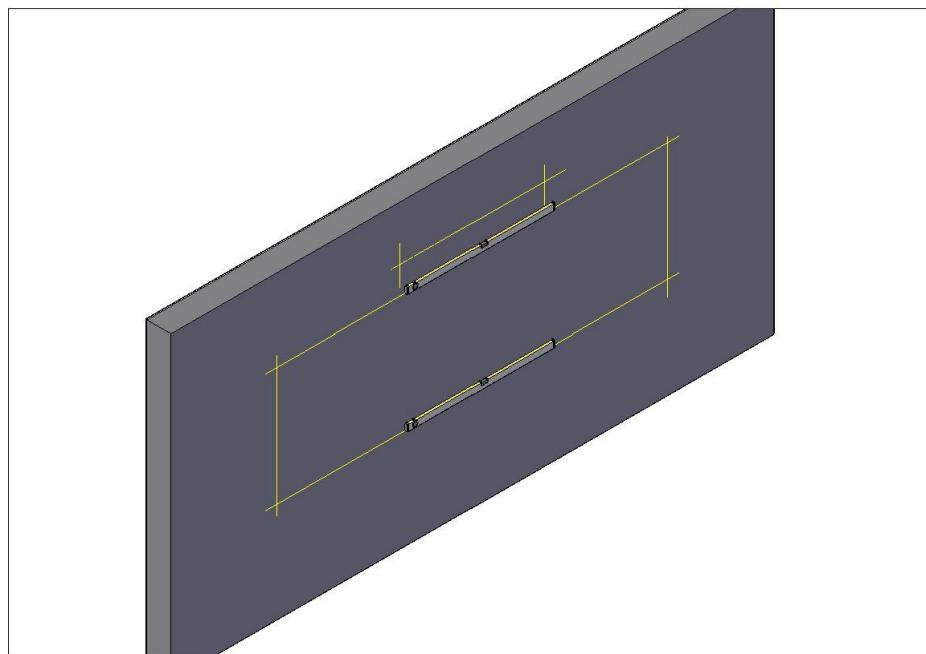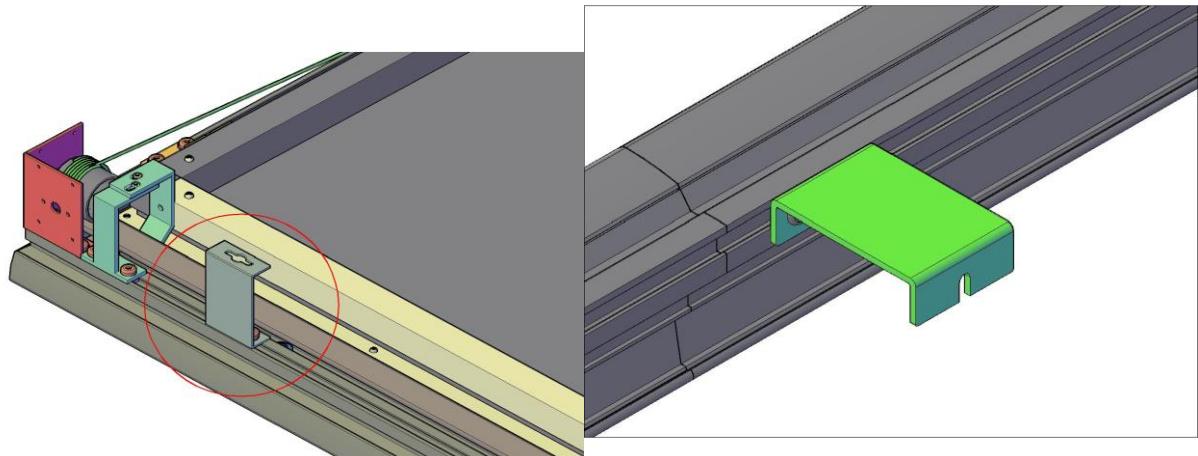

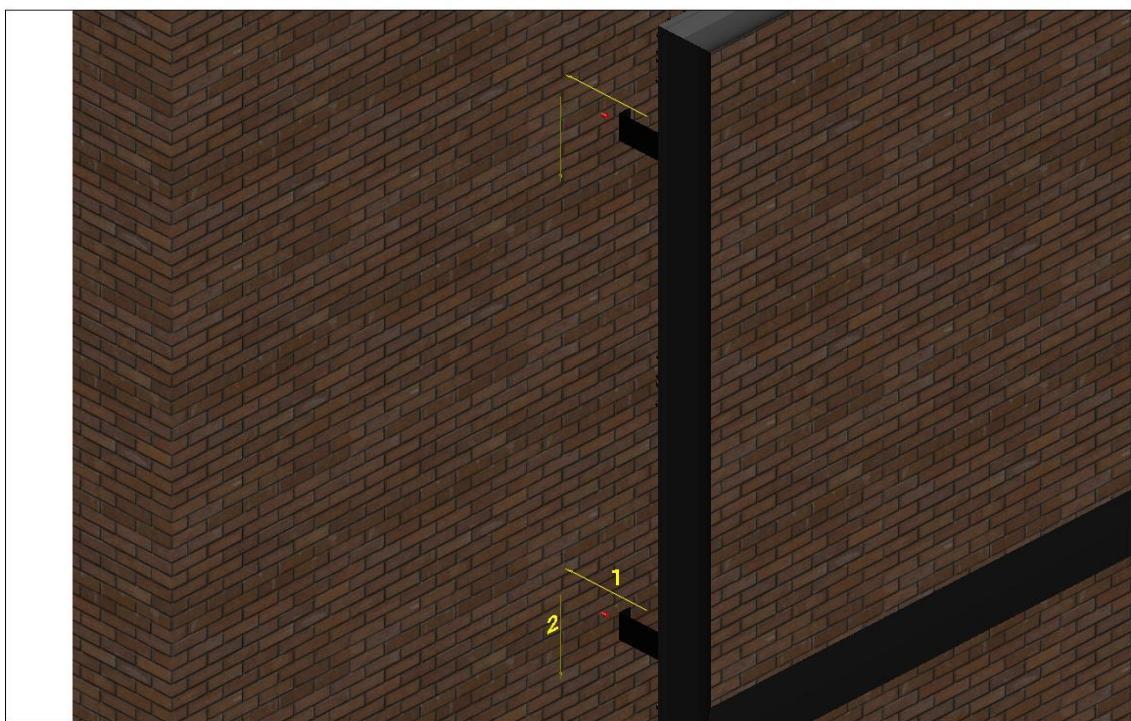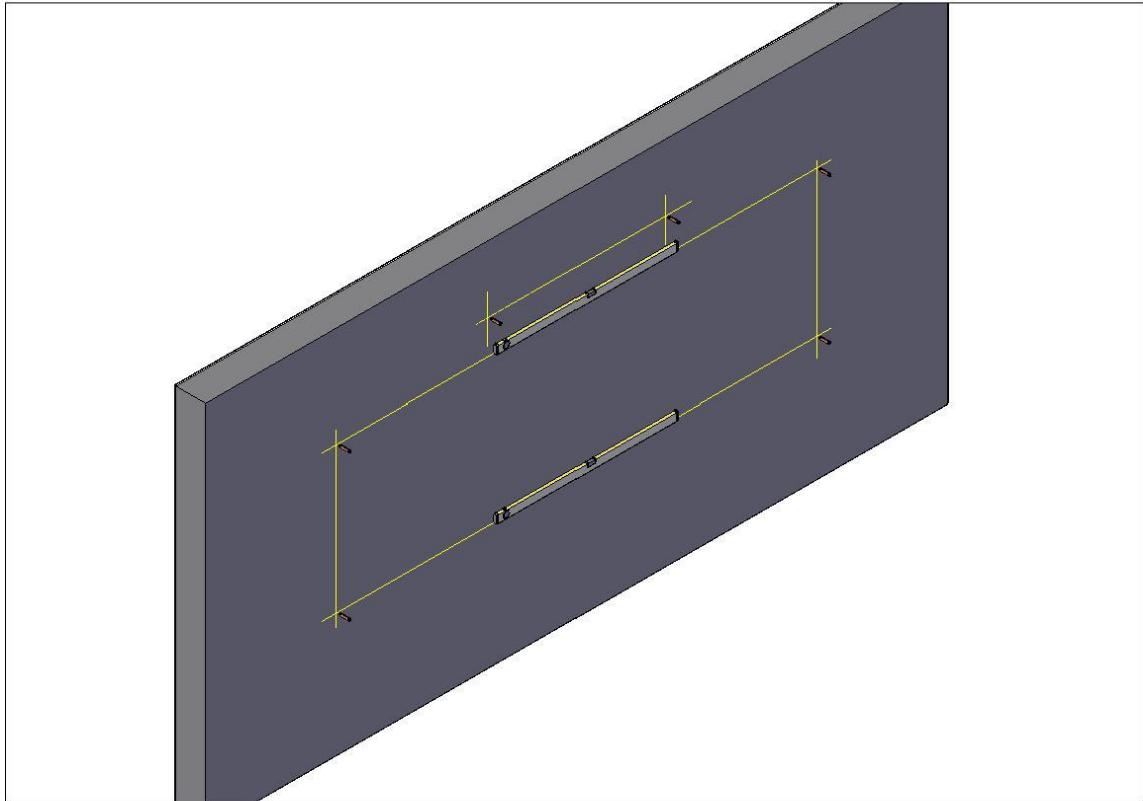

- **Each screen is pre-programmed in workshop. You don't need to calibrate or change positions of masks. Please contact our staff if you want to make changes.**